



BRUNETTE MACHINERY GRIZZLY MILL HOG

SAFETY BAR





GRIZZLY MILL HOG — SAFETY BAR


Accessing the GMH for maintenance is by opening the top box for clear access to the rotor. An orange safety bar is used to hold the top box open in case of hydraulic failure. Operating the hydraulics and installing the safety bar requires two individuals, one at the valve to open and one guiding the safety bar and lock pin into position.

How to open a Grizzly Mill Hog

1. Shut down and lock out main drive motors, infeed, and outfeed conveyors.
2. Remove top hood bolts = two top bearing bolts plus one clamp bolt, 6 total.
3. Start the hydraulic power unit (HPU) and activate the valve.
4. Raise the hood into the full upright position.
5. Install safety bar with lock bolt or pins.
6. Shut down HPU and lockout.
7. Service GMH.



Orange safety bar

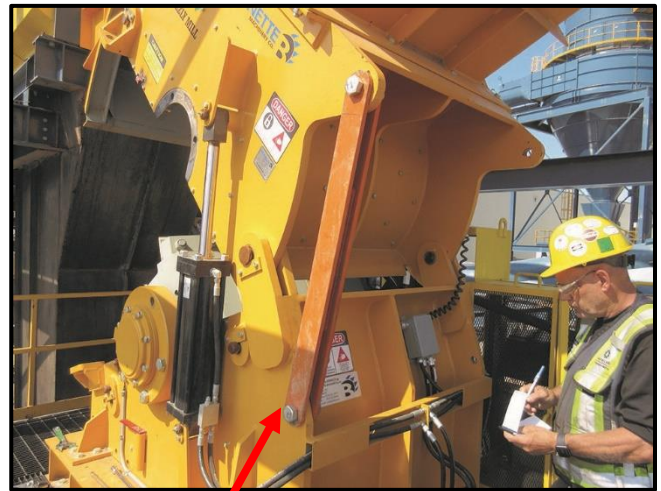

Upper frame locked open



Contact Brunette Machinery for Parts, Service, and Training

Brunette Machinery service technicians are available to support your maintenance team for training, major repairs, and/or bearing replacements. Contact us at the numbers below.

PARTS

- We deliver excellence
- Consumables in inventory
- On time delivery
- Quality OEM parts
- Service 24/7

Service

Our on-site service visit provides:

- Factory-trained OEM Technicians
- Complete Machine Inspections
- Detailed Follow-up Reports
- Preventative Maintenance Recommendations

BRUNETTE MACHINERY CO. Inc.

8717 132 Street

Surrey, BC

CANADA V3W 4P1

Phone: 604.522.3977

Toll Free: 1.800.686.6679

Email: parts@brunettemc.com

Website: www.brunettemc.com

For emergencies, please call our 24-hour emergency number: 604.813.3394



CBI Grizzly Mill



Veneer Chipper



Drop Feed Chipper



Sawmill Chipper



Reclaimer



BioSizer®